



1

Does the voltage setting that appears in the fuse holder window match the facility supply voltage?

If YES, go to Step 4.

If **NO**, you must perform Voltage Conversion Procedure.

> Equipment Alert Voltage setting that shows thru window <u>must</u> match supply voltage. Incorrect setting will result in damage to the chair.

Voltage Conversion Procedure:

- A. Open fuse holder cover.
- B. Remove fuse holder.
- C. Flip fuse holder 180°.



