




Caution:

Always disconnect power to sterilizer before removing cover. Allow sterilizer to cool then drain reservoir.

Step 1: Disconnect all tubes, wires and hoses from boiler.

Step 3: Angle boiler assembly and remove from base.

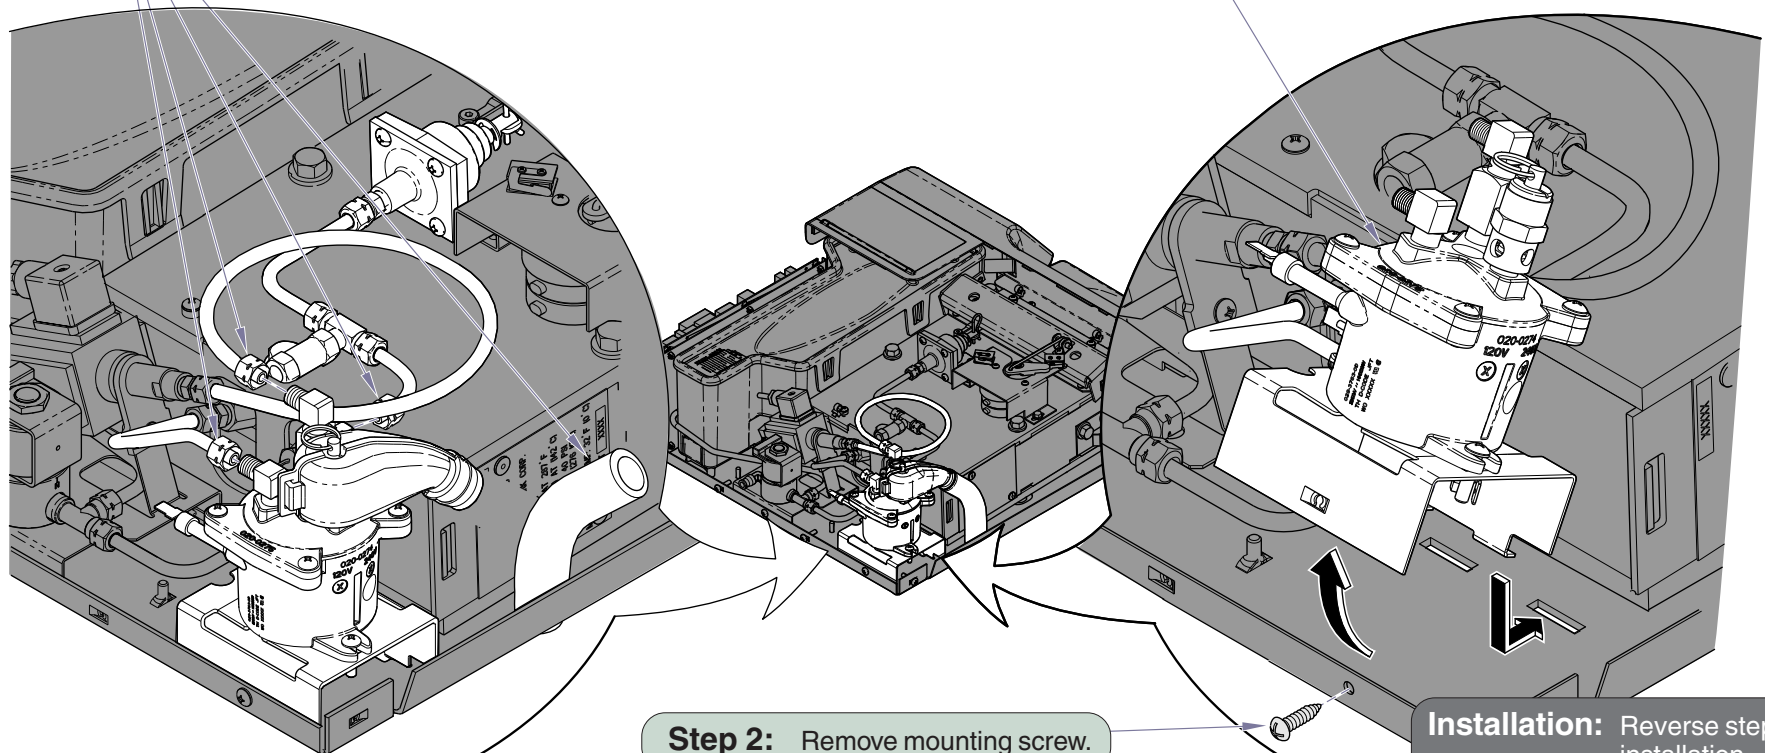

Step 2: Remove mounting screw.

Installation: Reverse steps for installation.