


## Flex Arm Replacement Kit [002-1401-00, 002-10209-00]


**Components:** 


Flex Arm Assy....... 1 Set Screw (Light).... 1 Set Screw (Arm).... 1 O-Ring..... 1


## Step 1: Disconnect power / remove lighthead.

- A) Disconnect power to light.
- B) Slide rubber seal up to expose the set screw.
- C) Remove set screw.
- D) Release latch on connector, then disconnect wire harness. (Prevent connector from being pushed into lighthead)

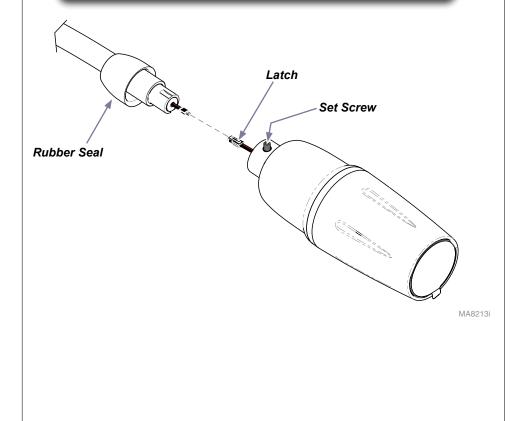


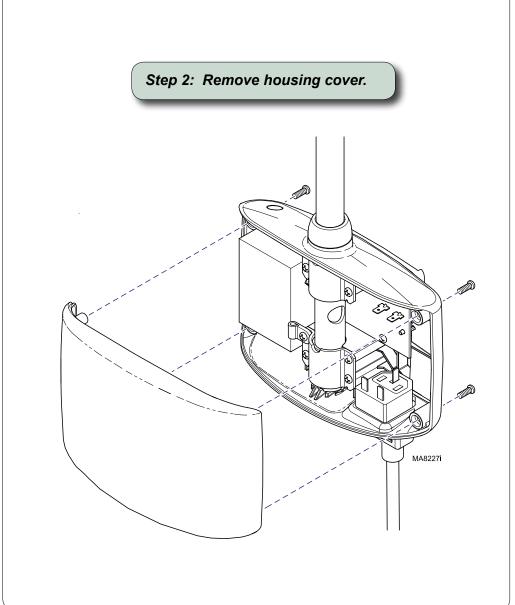

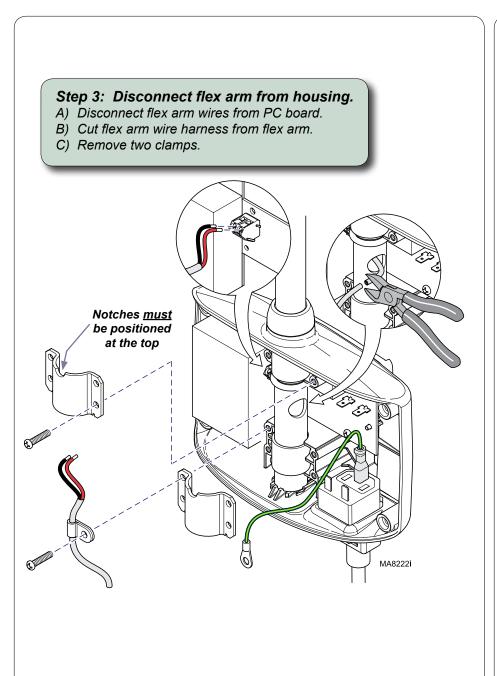

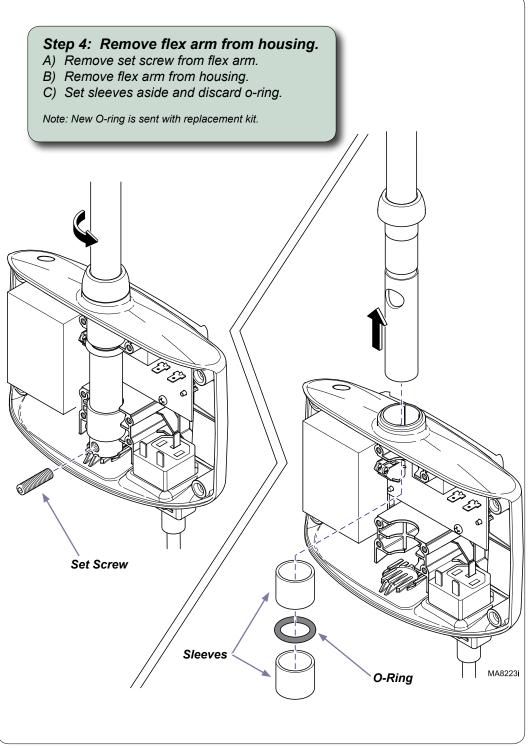

© Midmark Corporation 2010 Style A 2

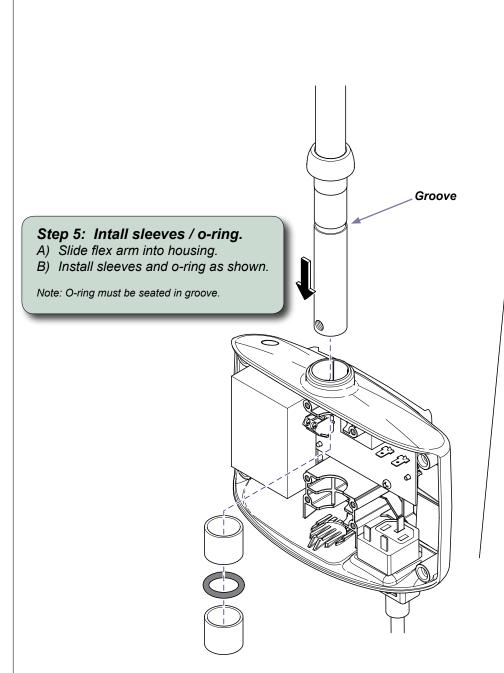




## **Equipment Alert**

Do <u>not</u> grab grey insulated portion of wire harness with pliers when pulling thru access hole. Doing so may result in damage to the harness.


## Step 6: Pull wire harness thru access hole.


- A) From the lighthead end of the flex arm, pull wire harness out until the red & black wires are visible thru the access hole at the housing end.
- B) Using pliers, CAREFULLY grasp the red & black wires, then pull harness out thru access hole.

  (Pull enough thru to allow connection to PC board)
- C) At lighthead end, push wire harness and dust plug back into flex arm.

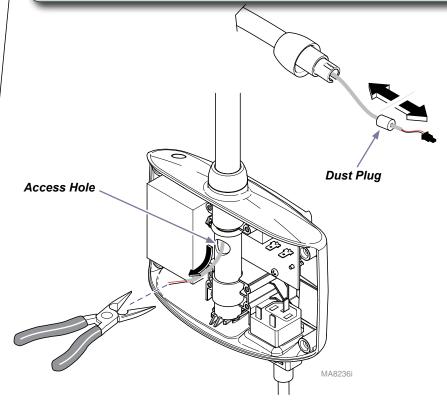

© Midmark Corporation 2010 Style A 3

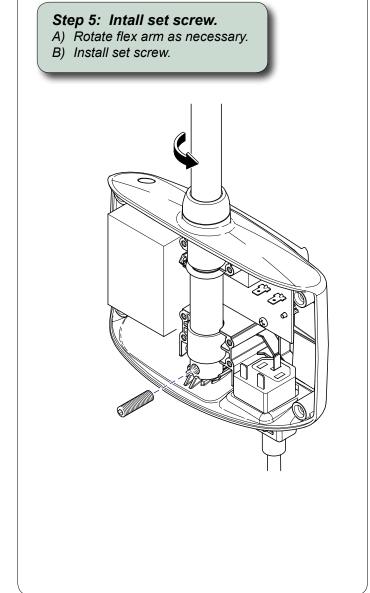

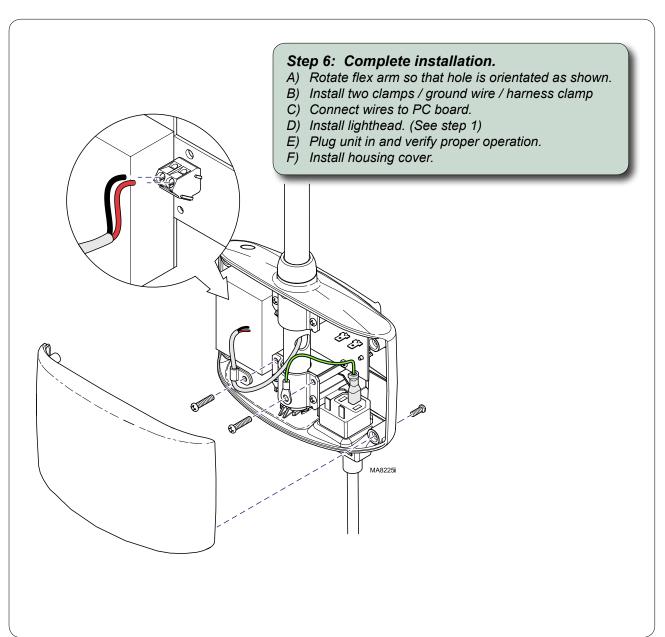



© Midmark Corporation 2010 Style A