


## Scaler Tubing Replacement [ 002-1498-00 (Standard), 002-1499-00 (LED)]

**Step 1:** Turn off unit. Unplug from wall outlet.

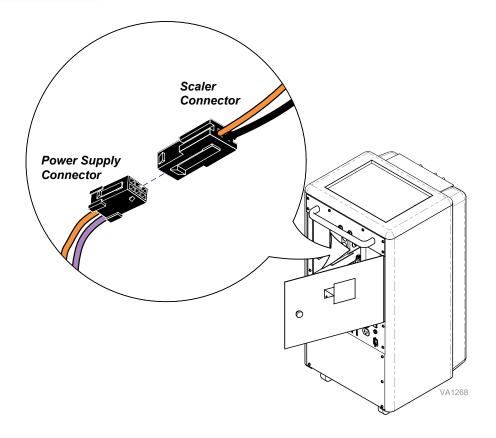



Step 2: Open back door.


Disconnect scaler wire harness (Orange/Black wires) connector from scaler power supply.


**Step 3:** Remove delivery panel.

Note: Verify which version you have by the serial number sequences.

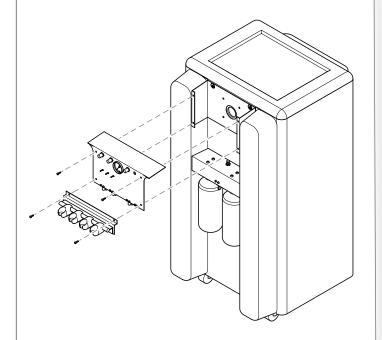

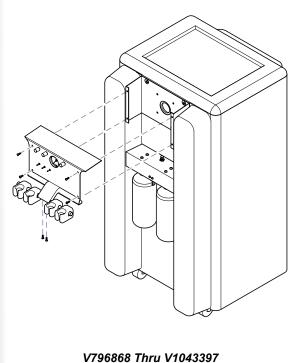

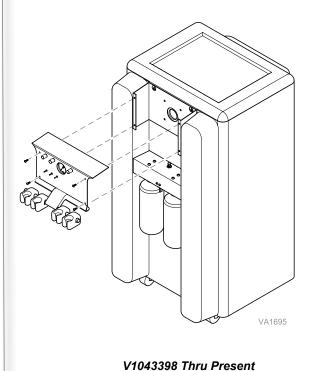

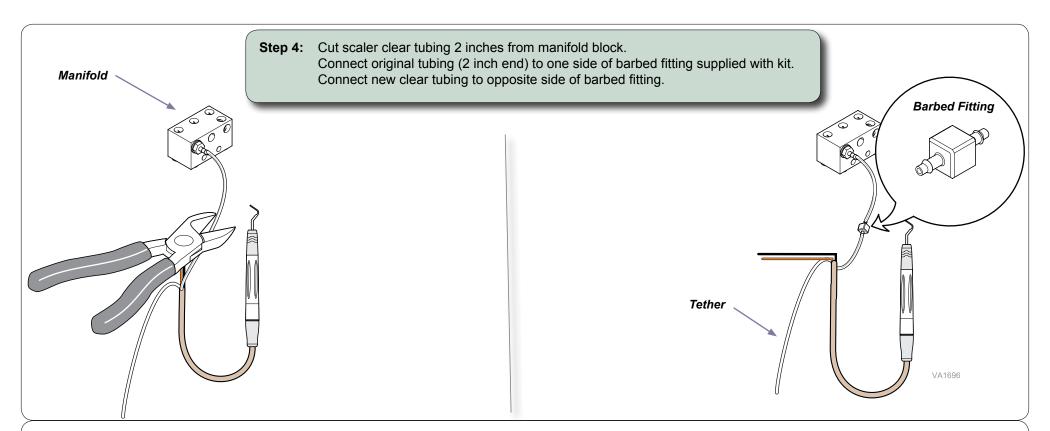



## **Equipment Alert**

It is extremely important the tether recieves all the tension, allowing the tubing and wire harness to stay in slack.


Step 4: Tuck excess tubing around the back of manifold.

Wrap tether from tubing around bracket (wrap around manifold on units without bracket). Cut off excess tether.

Replace delivery panel.

Install new wire harness connector to scaler power supply.



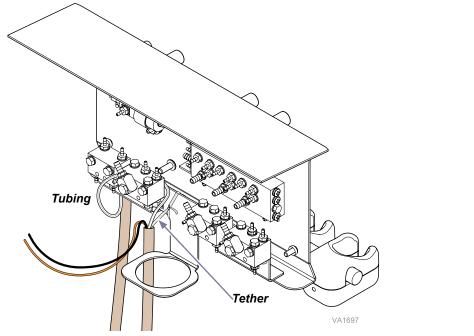

Connect power and test scaler.