

Replacement Compressor Head (Gast to Gast)

[#002-1667-00 115VAC, 002-1668-00 208-230VAC]


Applies to Models:
P21, P22, P32

Restrictions:

These instructions are used for replacing a Gast head on Midmark air compressors.

Step 1: Remove old head.

- A) Disconnect supply power to the compressor.
- B) Remove control box cover and disconnect head wire harness connections from switch and ground stud.
- C) Disconnect intake and fill hoses from head.
- D) Unbolt head and mounting plate from saddle.
- E) Repeat for each additional head. (P21, P22 = 2) (P32 = 3)

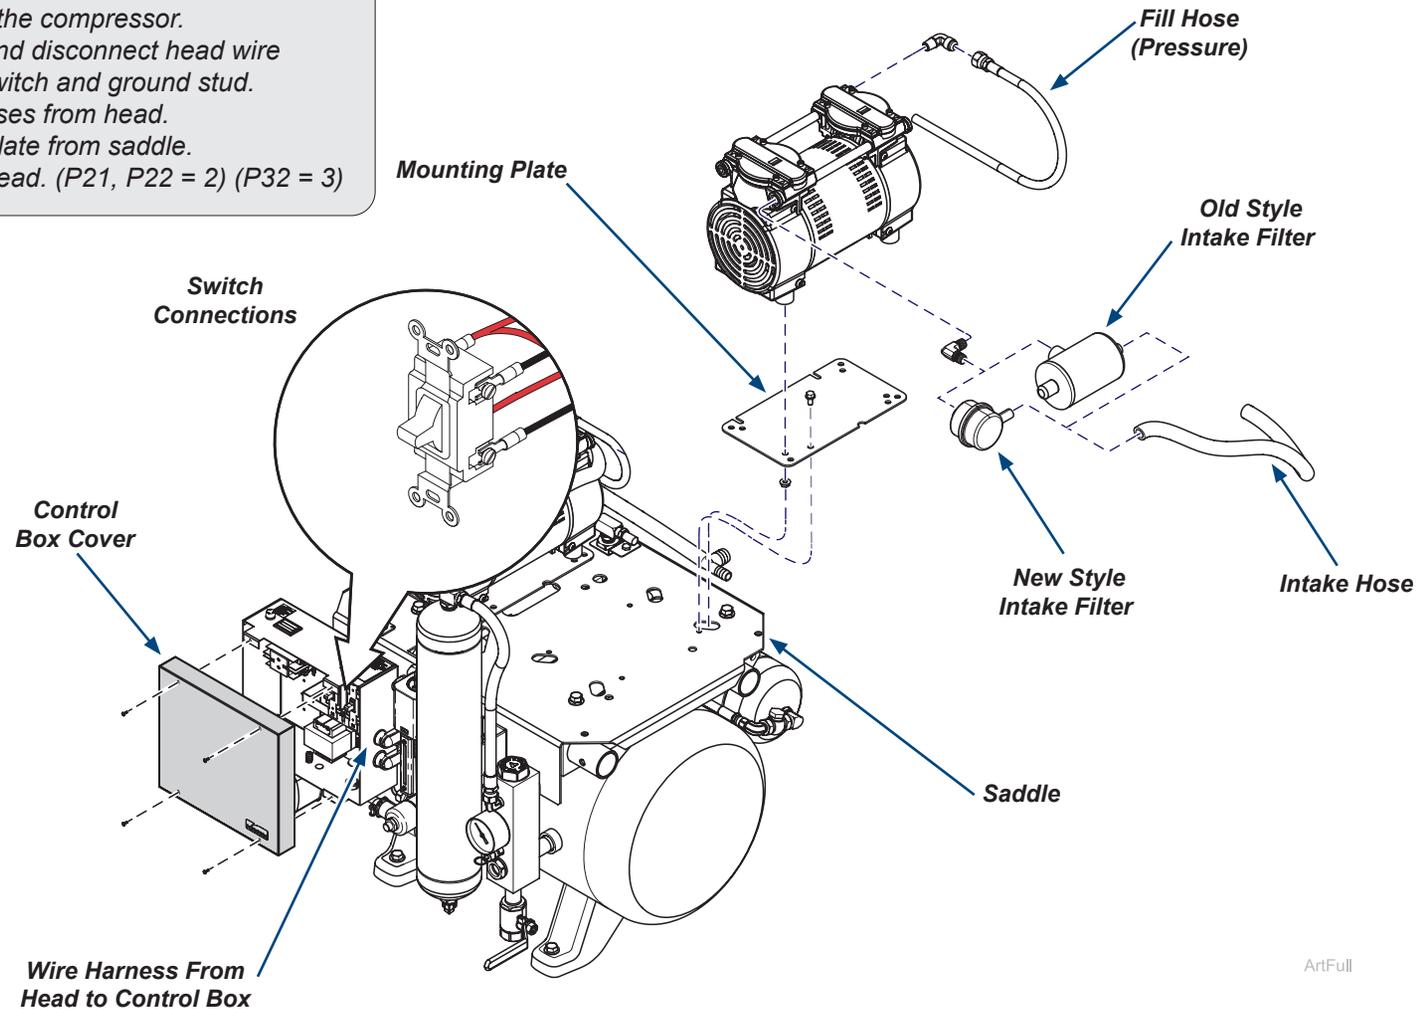

ArtFull

Step 2: Install new head.

- A) Install feet to bottom of head.
- B) Install mounting plate to bottom of feet.
- C) Secure head assembly to saddle.
- D) Apply pipe sealant to fill and intake elbow threads.
- E) Install flared elbow, and hose to fill (pressure) hose connection on back of head.
- F) Install elbow, air intake filter, and intake hose to intake connection on front of head.
- G) Install wire harness to control box. Connect wires to switch and ground stud.
- H) Repeat for each additional head. (P21, P22 = 2) (P32 = 3)
- I) Connect supply power to compressor.

