

# Machine Control PC Board [002-1748-xx]

**Applies to Models:** 

630 (-010 thru -013) 630 (-020 thru -023)


Special Tools:

Language of origin: English



#### WARNING

Always disconnect chair from power source before removing any covers. Failure to do so may result in personal injury.

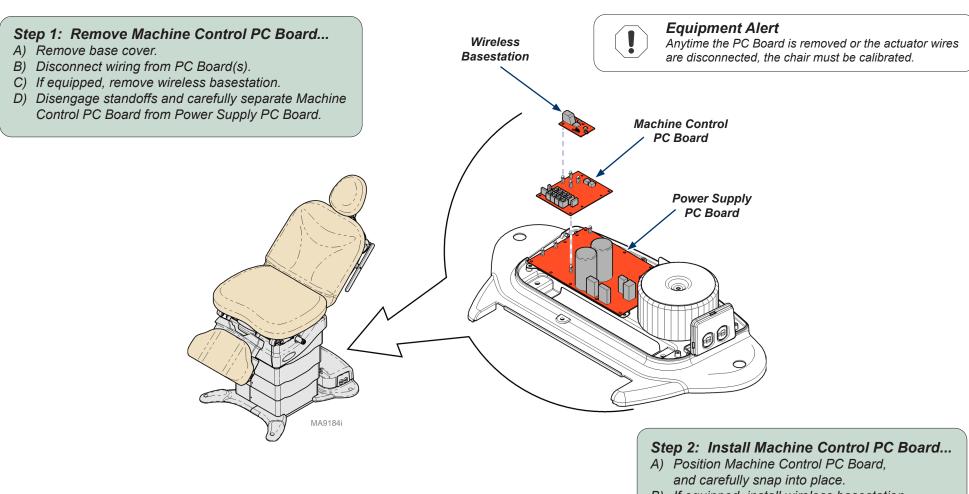


- B) If equipped, install wireless basestation.
- C) Connect wiring to PC Board(s).
- D) Calibrate chair.
- E) Install base cover.

#### WARNING

Always disconnect chair from power source before removing any covers. Failure to do so may result in personal injury.

To remove base cover...

- A) Remove three screws.
- B) Lift cover off of base.

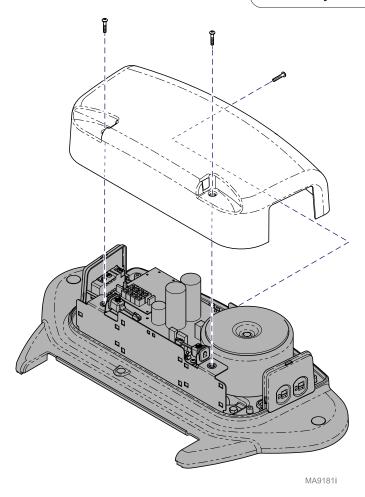

# To install base cover...

- A) Position cover on base.
- B) Secure with three screws.

TP200 Rev. A

During the calibration procedure you will hear a steady pattern of "beeps".

The chair will run all functions (base, back, tilt, foot) to their minimum and maximum positions, then return to a lowered flat position.

When calibration is complete, the chair will stop moving and you will hear three short "beeps".


#### You must calibrate the chair in the following situations:

- After replacing Power Supply PC Board.
- After replacing Motor Control Hub PC Board.
- · After replacing Machine Control Board.
- After replacing Base, Back, Tilt or Foot actuators.
- · After a limit switch bracket is adjusted.
- · When an error code indicates calibration is needed.



# **Equipment Alert**

Anytime the PC Board is removed or the actuator wires are disconnected, the chair must be calibrated.

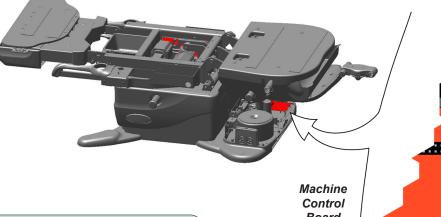

## Note

When S3 switch is pressed, then released you will hear a steady pattern of "beeps". When calibration is completed you will hear three short beeps.

### To calibrate...

- A) Slide foot section to highest stowed position.
- B) Unplug chair power cord.
- C) When the digital display darkens, move S2 switch number four to ON (up).
- D) Plug in chair power cord.
- E) When the digital display darkens, press and release S3 switch.
- F) When calibration is complete, unplug chair power cord.
- G) Move S2 switch number four to OFF (down).
- H) When the digital display darkens, plug in chair power cord.

