


REPLACEMENT NEEDLE VALVE INSTALLATION


1. TURN OFF OXYGEN SUPPLY.
2. PULL COLORED KNOB FROM NEEDLE VALVE STEM.
3. LOOSEN NEEDLE VALVE BY TURNING ½" HEX NUT COUNTER-CLOCKWISE.
4. UNSCREW NEEDLE VALVE FROM FLOWMETER BODY.
5. INSERT REPLACEMENT NEEDLE VALVE INTO FLOWMETER BODY AND TIGHTEN.
6. ALIGN FLAT ON NEEDLE VALVE WITH FLAT IN COLORED KNOB AND PUSH INTO PLACE.

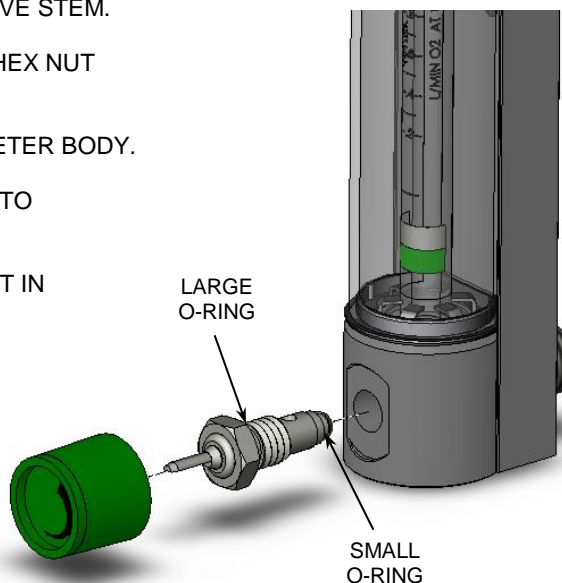

P/N 10536700 Rev AA1 7/26/21

REPLACEMENT NEEDLE VALVE INSTALLATION

1. TURN OFF OXYGEN SUPPLY.
2. PULL COLORED KNOB FROM NEEDLE VALVE STEM.
3. LOOSEN NEEDLE VALVE BY TURNING ½" HEX NUT COUNTER-CLOCKWISE.
4. UNSCREW NEEDLE VALVE FROM FLOWMETER BODY.
5. INSERT REPLACEMENT NEEDLE VALVE INTO FLOWMETER BODY AND TIGHTEN.
6. ALIGN FLAT ON NEEDLE VALVE WITH FLAT IN COLORED KNOB AND PUSH INTO PLACE.

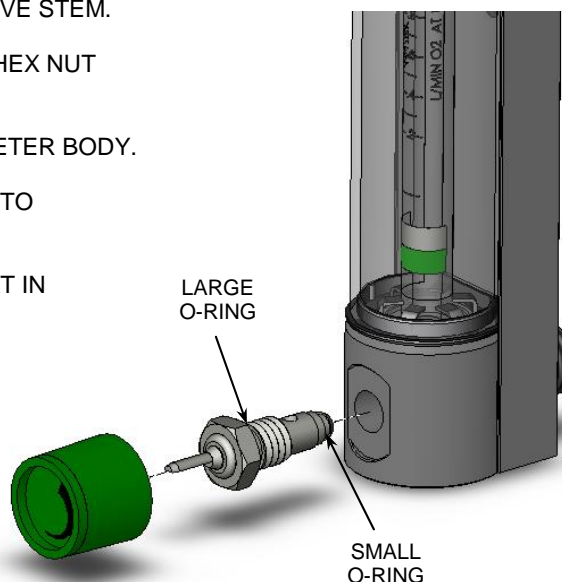

P/N 10536700 Rev AA1 7/26/21