


Veterinary Folding Exam Table Installation

Equipment Alert The wall structure must be capable of supporting the table load. Weight: 90 lb. (41 kg) Combined table and patient torque (max) 1660 ft. lb. (2250 N-m) For wall construction types not shown here (i.e. concrete, block, brick, etc.), it is the responsibility of the contractor/installer to supply appropriate hardware. Loose Parts Sent with Table Step 1: Determine mounting location. A) Use dimension information shown to determine the mounting location. 60 Shaft Support E-Ring 24" Spacer Bearing 3/8" x 4" Hex HD Lag Bolt \bigcirc 3/8" Washer 1/4-20 x 7/8" Hex Screw 42" -16"-**Upper Shaft** 0 12 3/4" Lower Shaft Install Table A Minimum Re 36" to Floor of 36" From Floor For P200 Clearance when Table is in Drop Position Note VA1844i Shafts come installed on wall base and folding section. Must remove before installing the folding section to the wall base. VA1843i

Step 2a: Install wall base for Wood Studs.

- A) Mark top two mounting holes on stud centers, 33.25" from floor.
- B) Drill two 1/4" holes 4" deep at mark hole locations.
- C) Secure wall base to wall with two 3/8" lag bolts (for wood) and washers.
- D) Drill other four mounting holes for wall base and install remaining bolts and washers.
- E) As you tighten all bolts, use level to make sure wall base is flat.

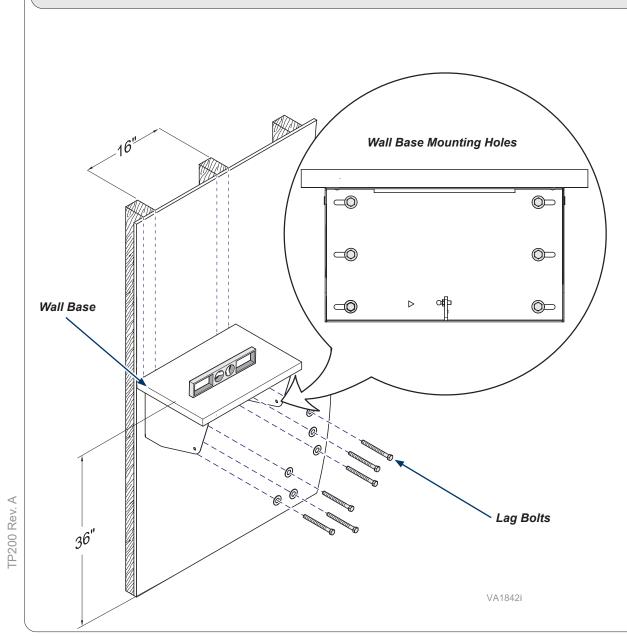



Serious injury possible if instructions are not followed





Equipment Alert


Table top must be 36" minimum from floor.

Note

Refer to chase installation manual for mounting hole locations in chase cabinet. To install table to chase, use hardware included with chase cabinet. (3/8" bolts, washers and nuts)

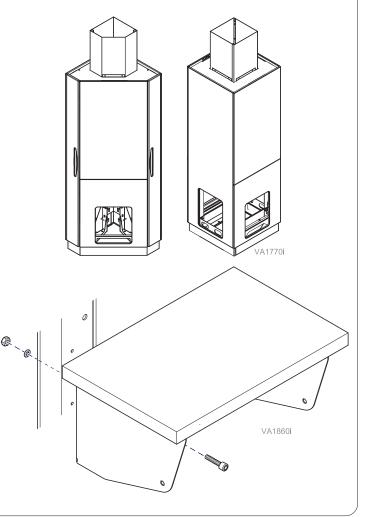


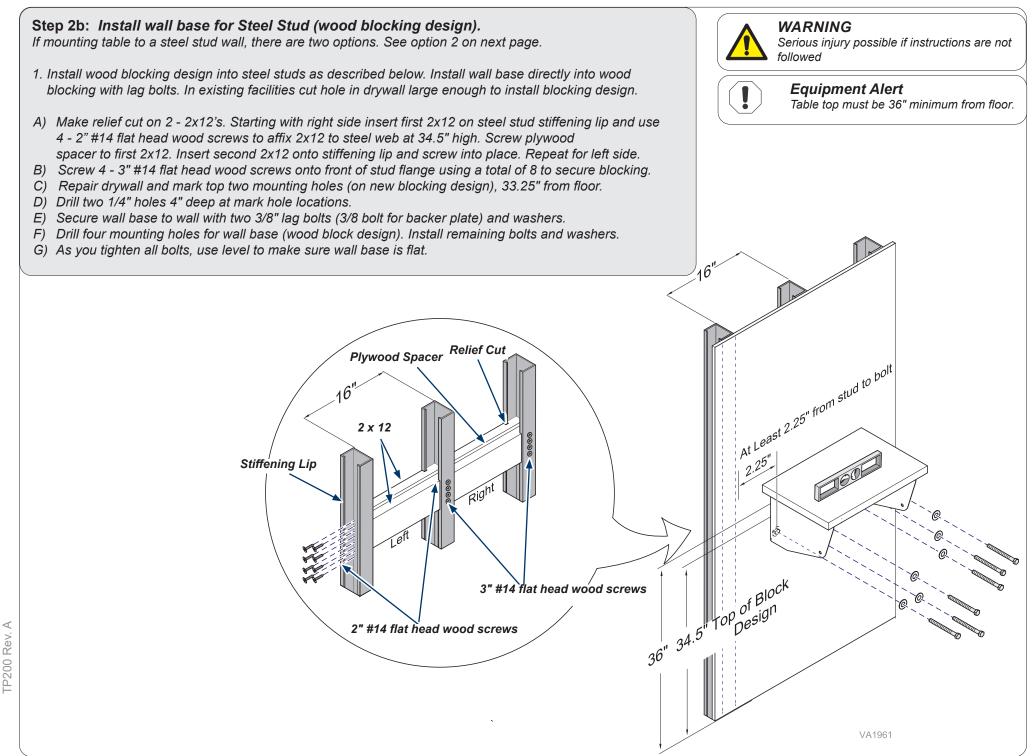


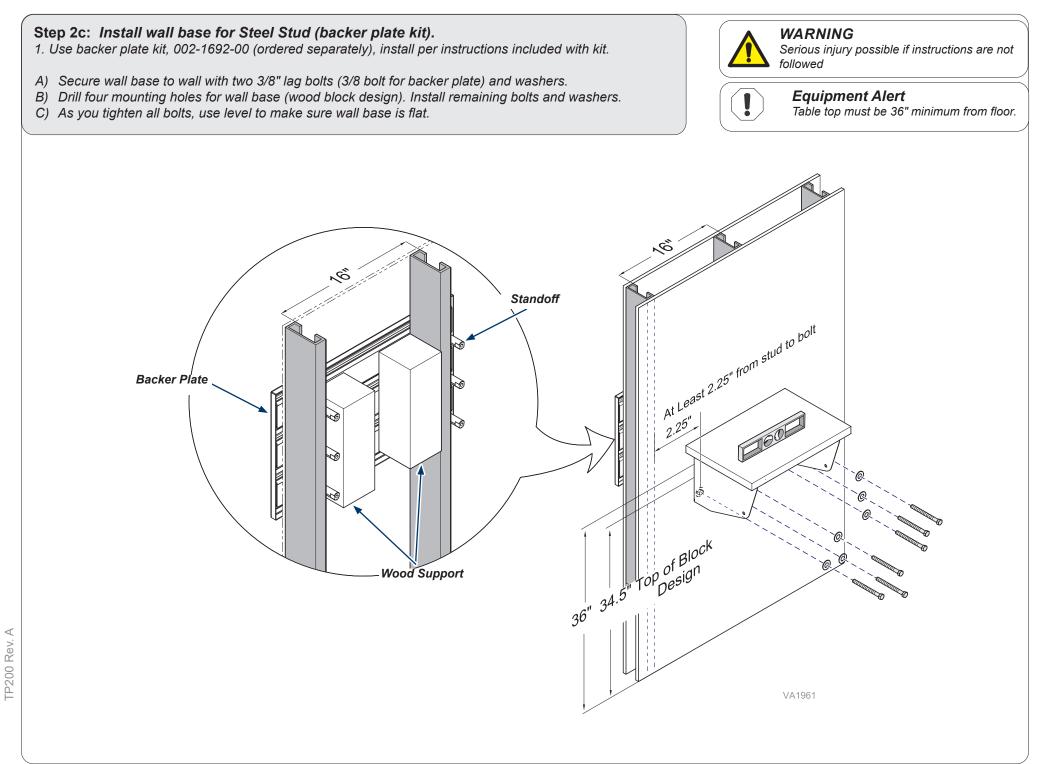


Step 3: Install folding section.

- A) Install first e-ring on one end of upper shaft.
- B) Position folding section to wall base and slide top shaft through mounting holes.
- C) Install second e-ring to other end of top shaft.

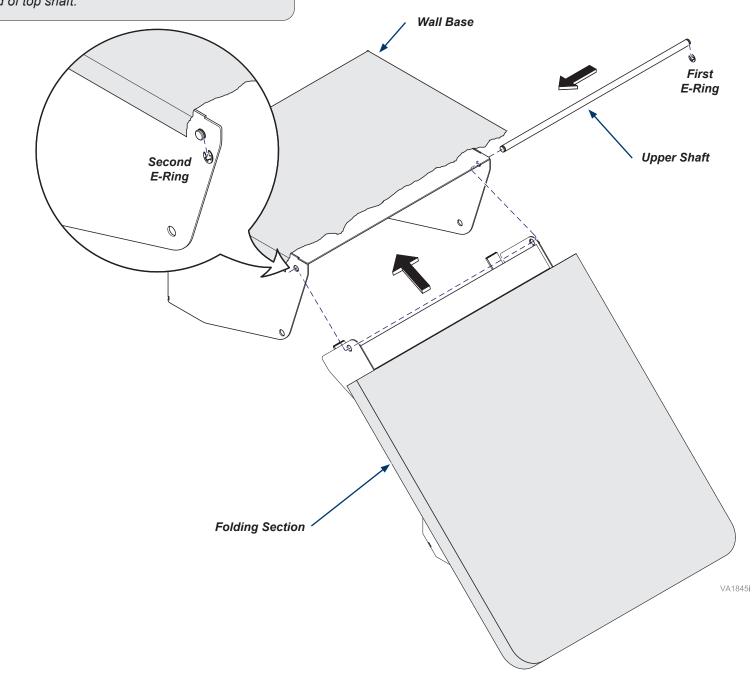


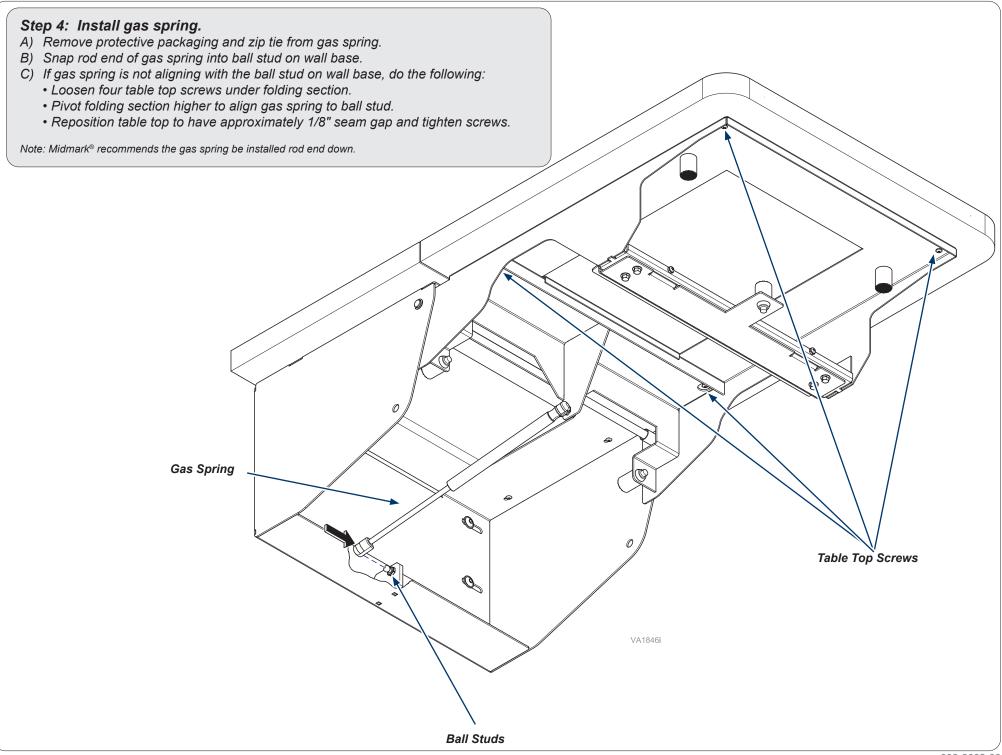

TP200 Rev. A

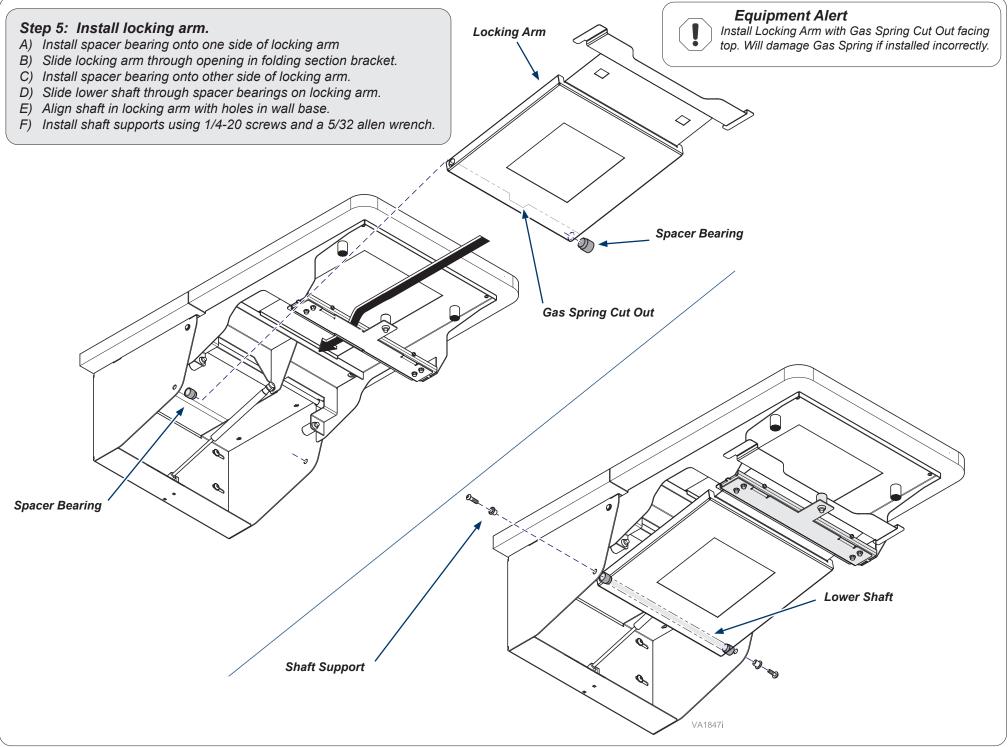

TP200 Rev. A

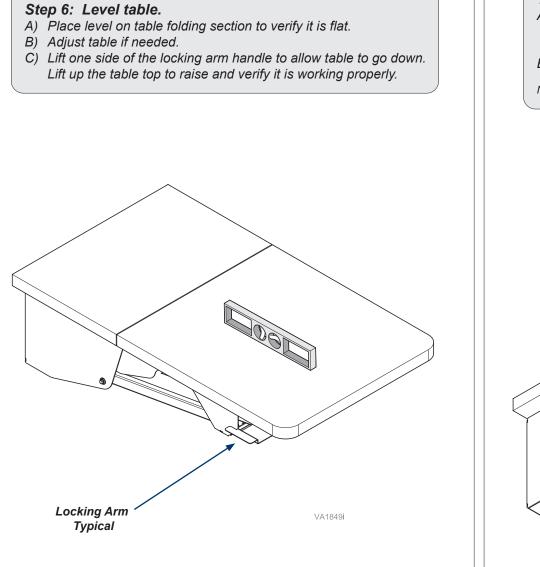

TP200 Rev. A



003-2602-00

To adjust table (if needed)..

- A) Loosen all four bolts under end of table.
 - Turn two adjustment screws clockwise to raise table.
 - Turn two adjustment screws counterclockwise to lower table.
- *B)* Tighten all four bolts.

Note: Both adjustment screws need to be loosened to properly level.

