





WARNING

Disconnect power, shut off air and water before performing this procedure.

Step 1: Remove existing PC board.

- A) Remove clear tubing from PC board.
- B) Remove wire connectors from PC board.
- C) Remove PC board from dental unit.

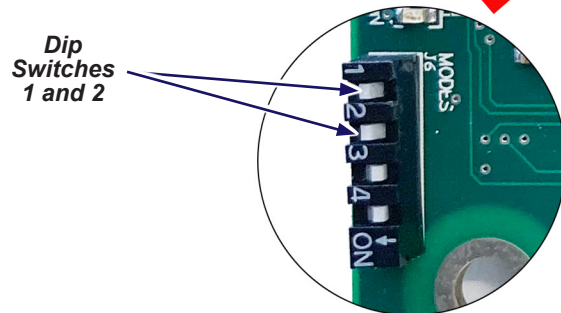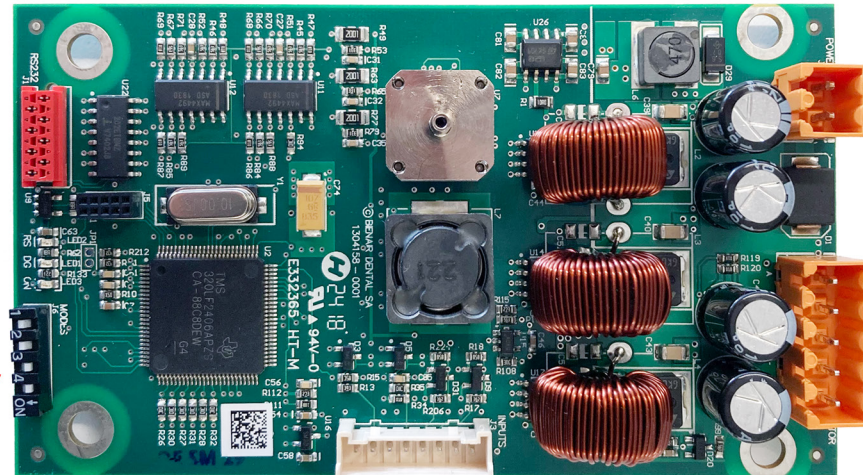

Step 2: Install new PC board.

- A) Push dip switches 1 and 2 to the ON position.
- B) Install PC board into dental unit.
- C) Install wire connectors on PC board.
- D) Install clear tubing on PC board.

ArtFull