

Countertop Cutout Instructions

Components:	Special Tools:
Countertop 1	Jig Saw (w/ fine tooth blade) Straight Edge

Step 3: Always cut along back splash first.


Equipment Alert
Support sink cutout before making final cut to avoid splitting or tearing of laminate.

Step 4: Cut remaining sides making sure to support cutout area before final cut.

Step 2: Use fine tooth blade for cutting.

Precut Radius

Step 1: Scribe lines joining precut radiuses.

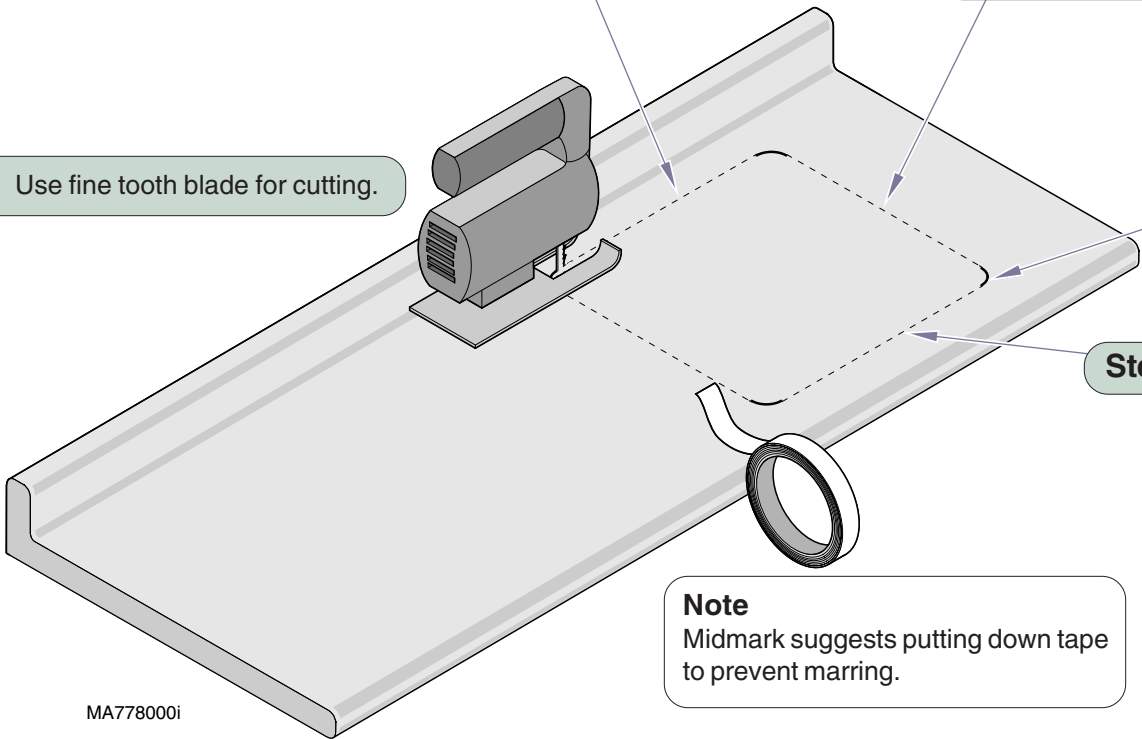

Note
Midmark suggests putting down tape to prevent marring.

MA778000i