




Caution:

Always disconnect power to sterilizer before removing cover. Allow sterilizer to cool.

Step 2: Remove screw from top of diode.

Step 3: Remove diode.

Step 1: Unplug harness from J2 terminal on PC board.

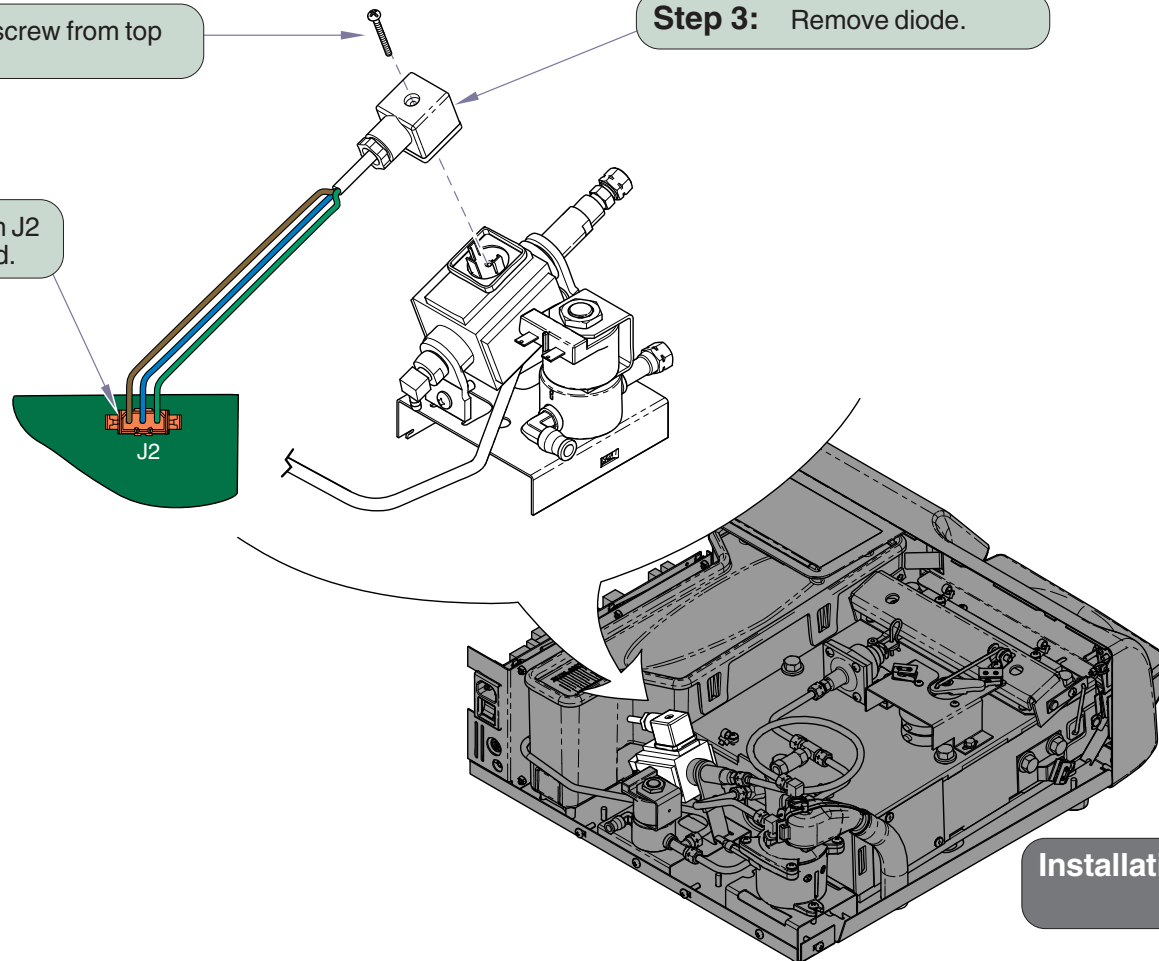

Installation: Reverse steps for installation.