


Step 4: Remove PC board from housing.

*Note: PC board is held in place with screws & silicone.
Pull / pry PC board to remove*

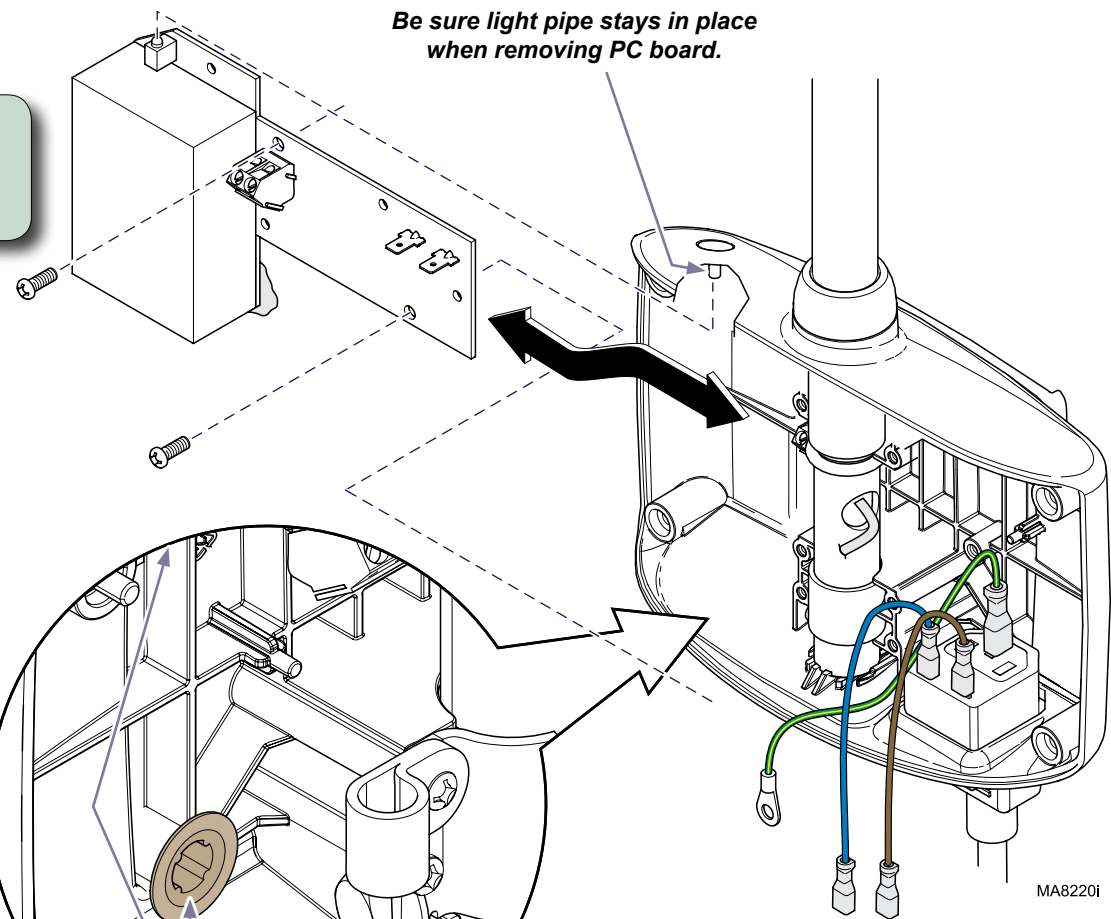

Step 5: Apply silicone to nutserts.

*Note: Only apply silicone to the two nutserts that are shown.
Do not allow compound to harden before assembling circuit board.*

Step 6: Position PC board,
Secure with two screws.

Step 7: Connect wiring.
Install two clamps.
Install housing cover.

Note: Refer to illustration on Page 1.