


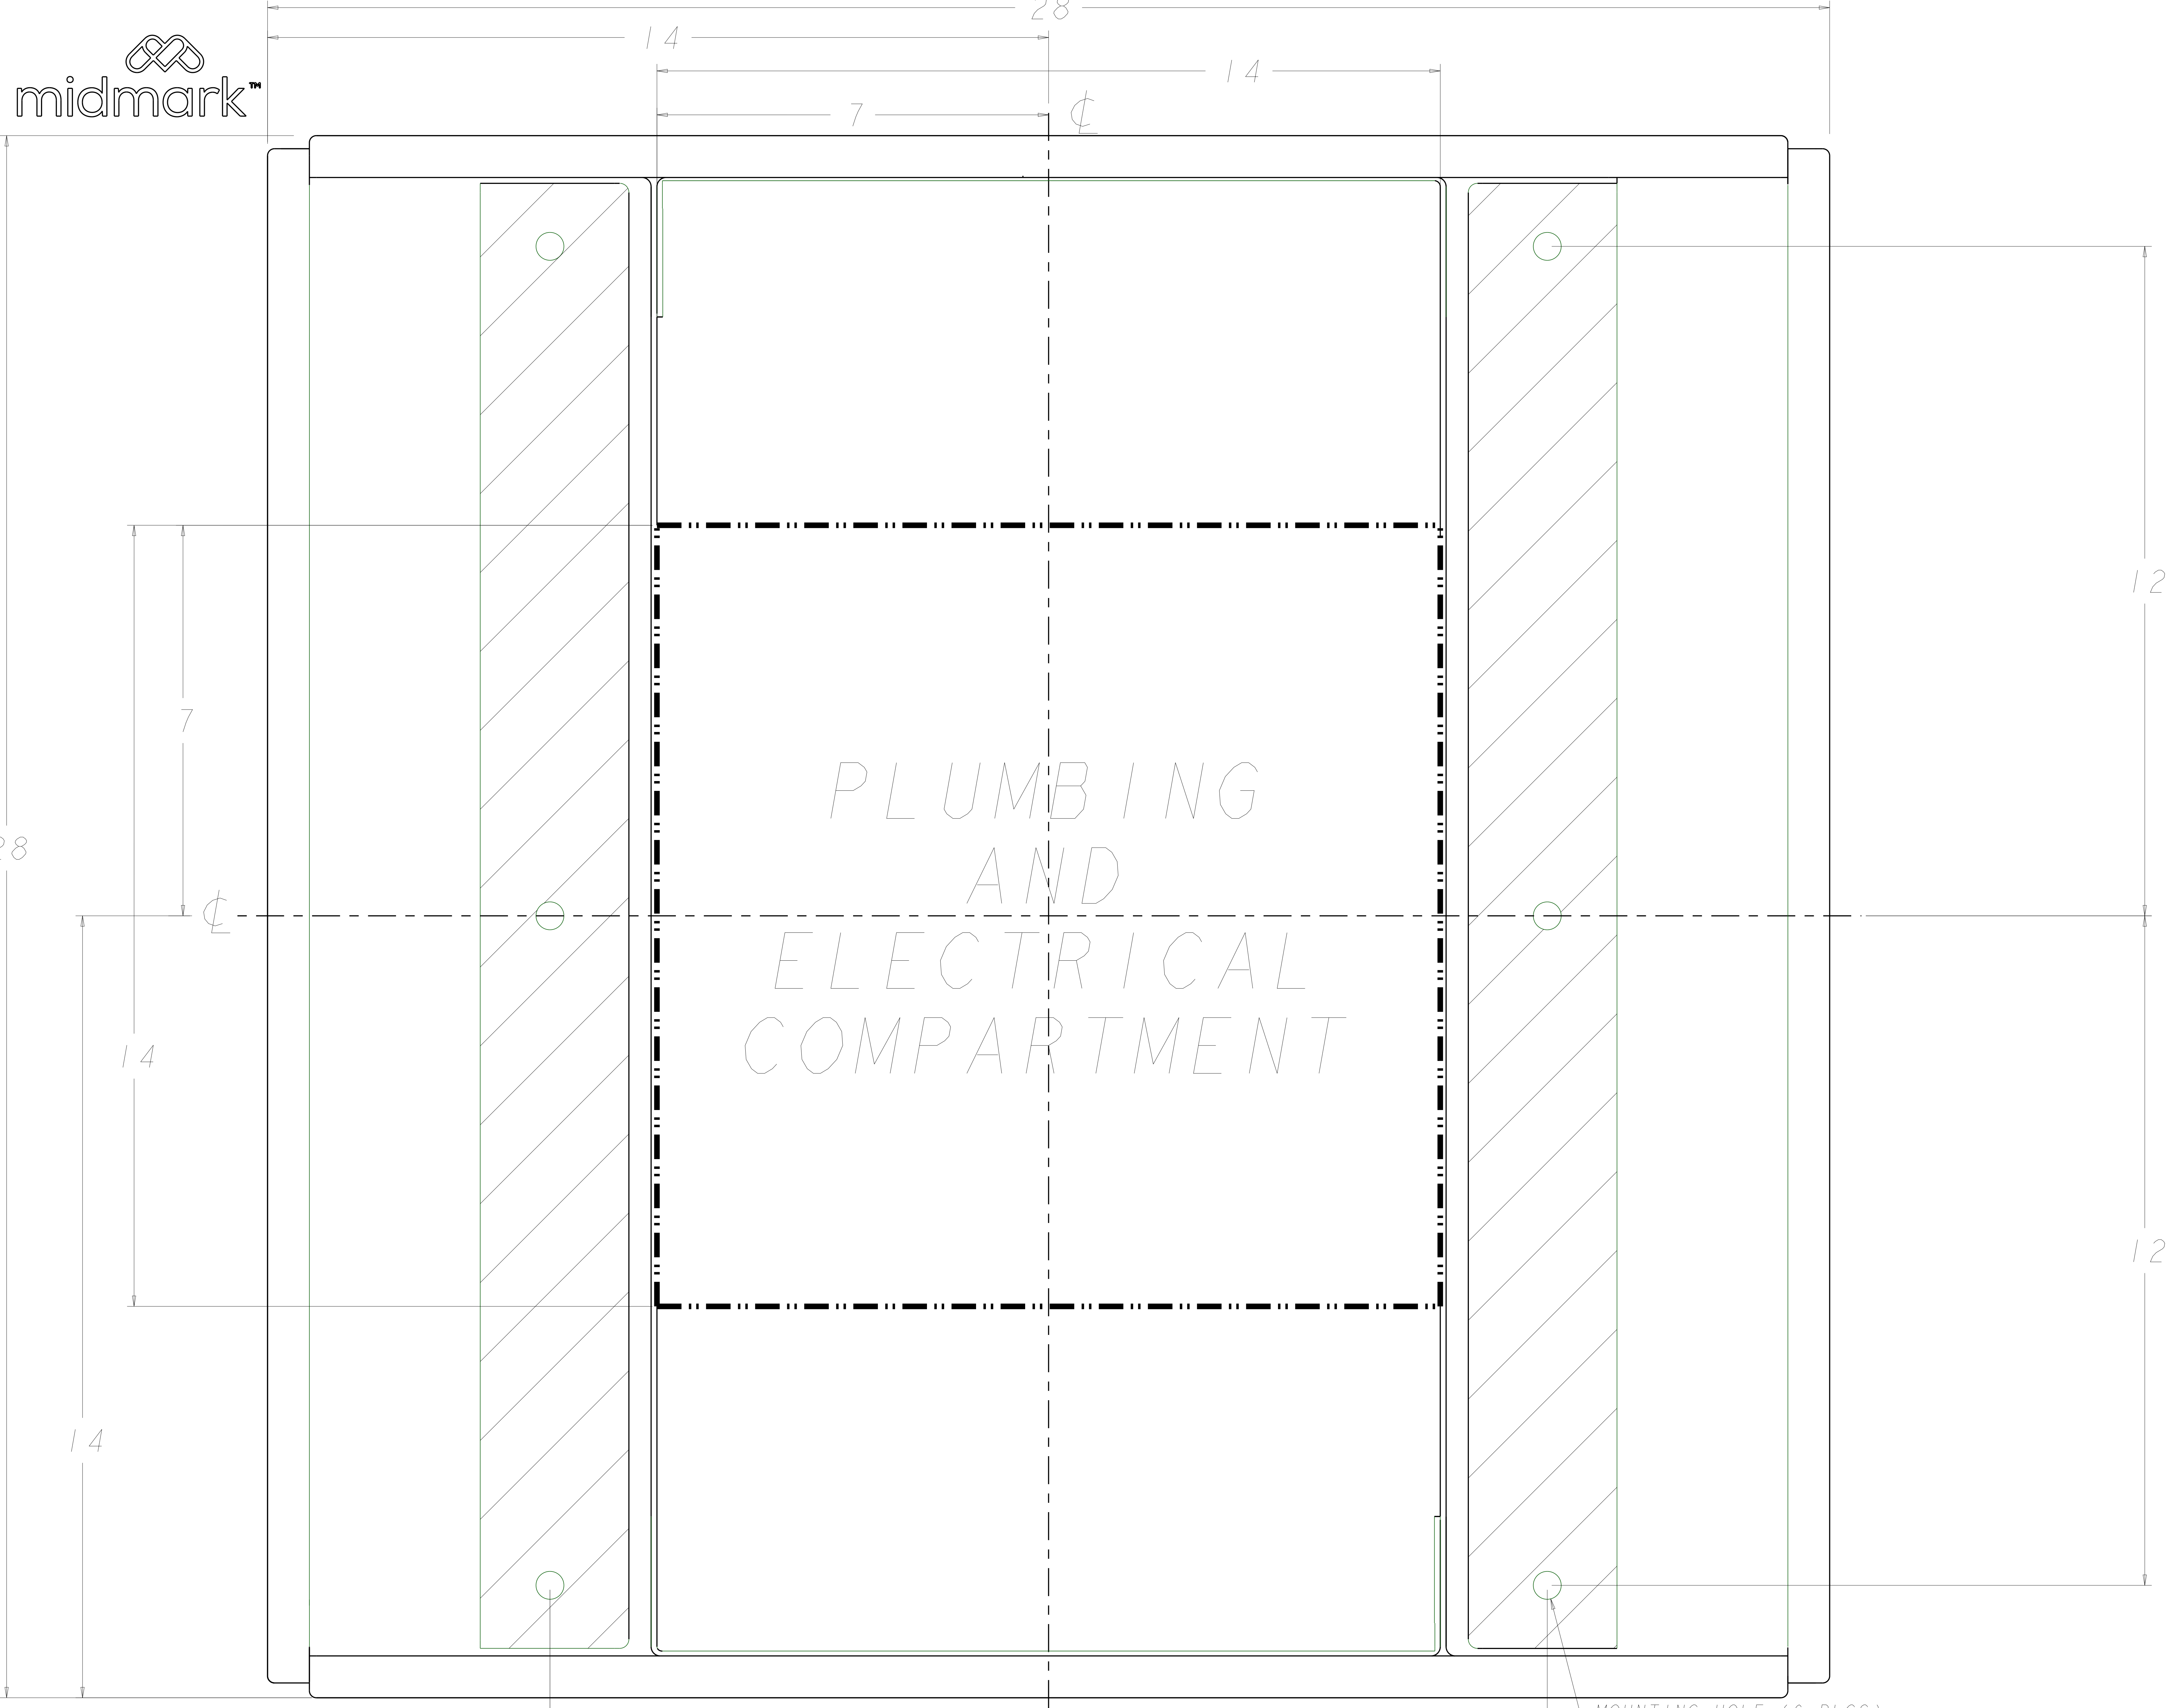

ANCHOR SIZE (INCLUDED W/ PRODUCT): 3/8-16 X 3 1/2"
 RECOMMENDED DRILL SIZE FOR ANCHORS: 3/8"
 HAMMER DRILL RECOMMENDED TO ENSURE BEST QUALITY HOLE
 LAG SCREW SIZE (INCLUDED W/ PRODUCT): 3/8" X 3 1/2"
 RECOMMENDED DRILL SIZE FOR LAGS: 5/32"
 HOLE SIZE FOR LAG MAY VARY DEPENDING ON QUALITY OF LUMBER
 SEE 003-2443-00 INSTALL INSTRUCTIONS FOR FURTHER DETAIL